 


# Rim

 
NÁVOD K POUŽITÍ  
BEDIENUNGSANLEITUNG  
OPERATING INSTRUCTIONS  
MODE D'EMPLOI  
INSTRUKCJA UŻYTKOWANIA  
HASZNÁLATI ÚTMUTATÓ

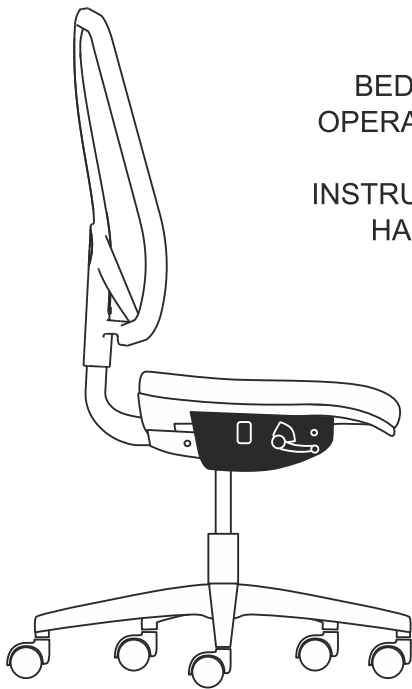


**FLEXi FX 1103A**  
**FLEXi FX 1113A**  
**FLEXi FX 1104**  
**FLEXi FX 1114**

**SYNCHRO ST1**


1

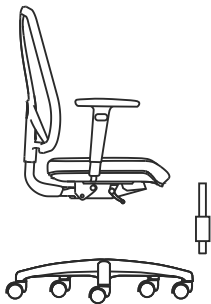


2

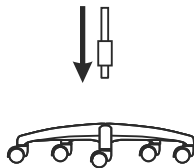 




3

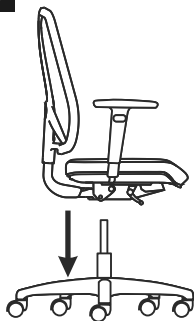 


4


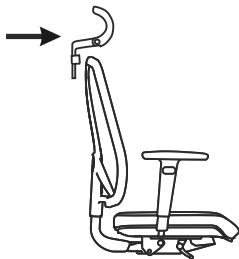 


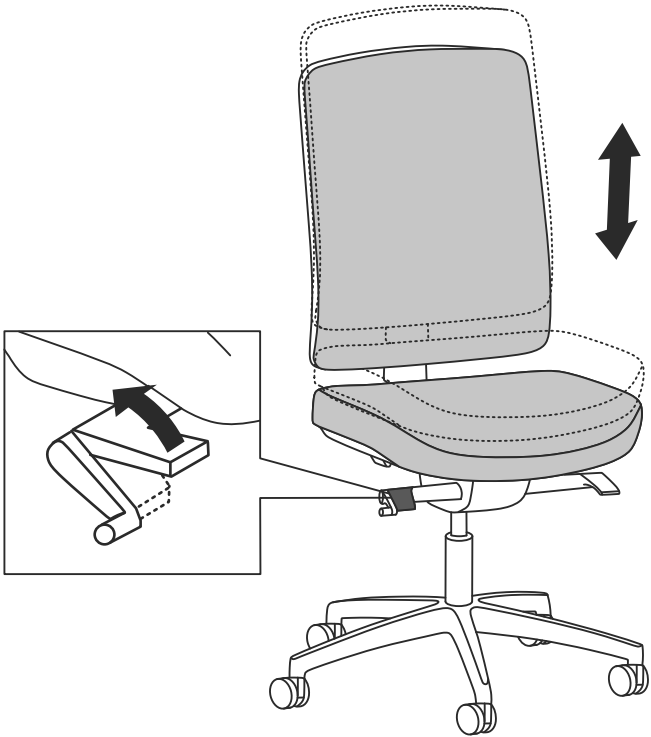 

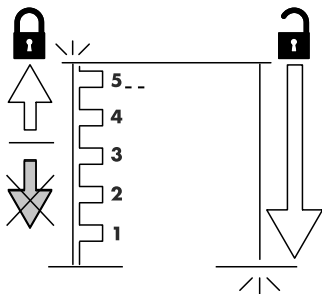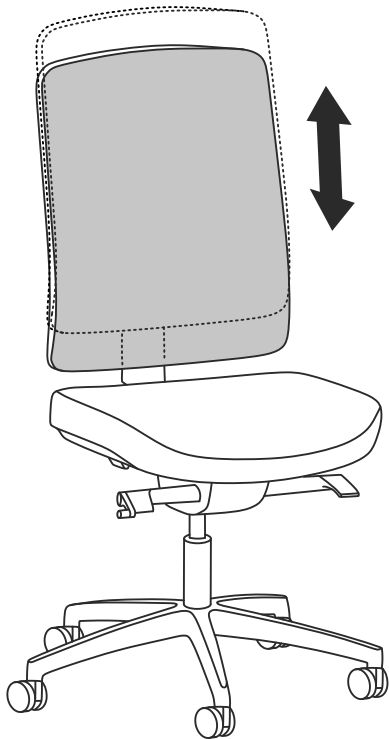  


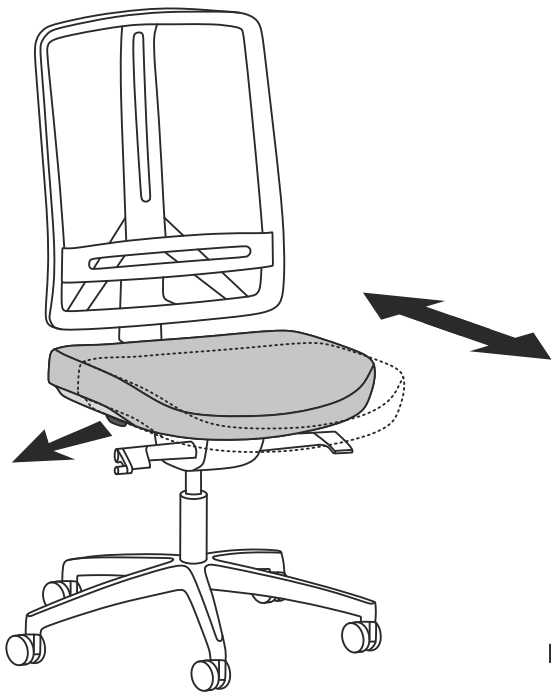 


FX 1103A  
FX 1113A

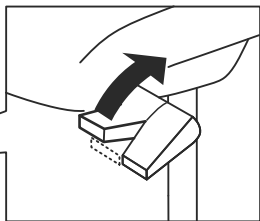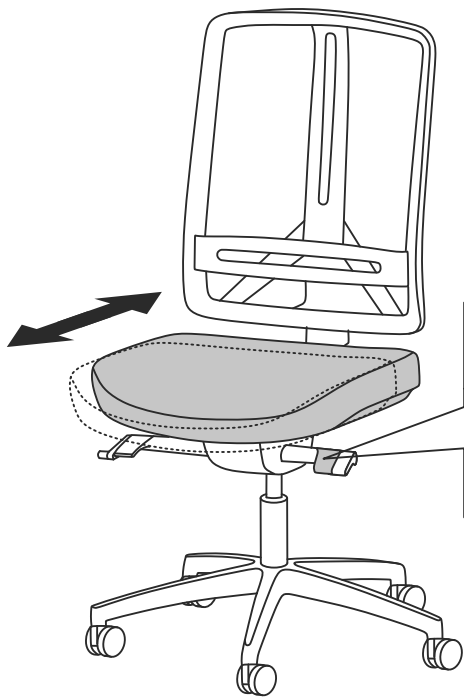  


FX 1104  
FX 1114

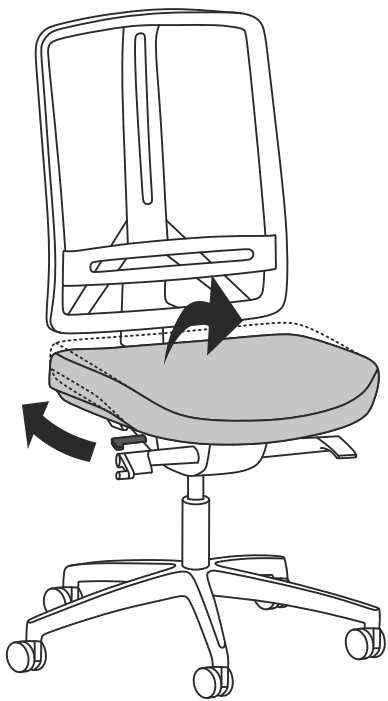 



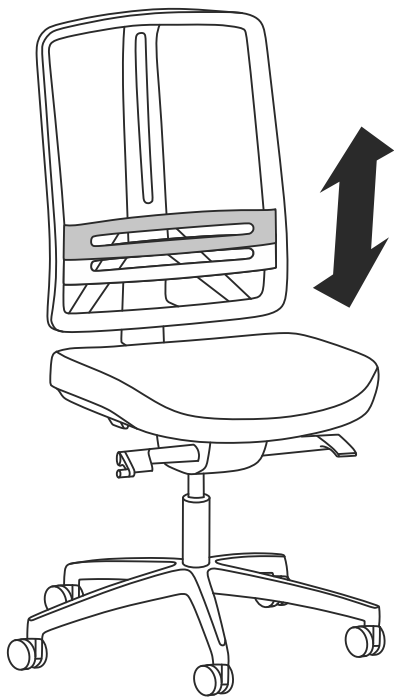 


FX 1103A  
FX 1104







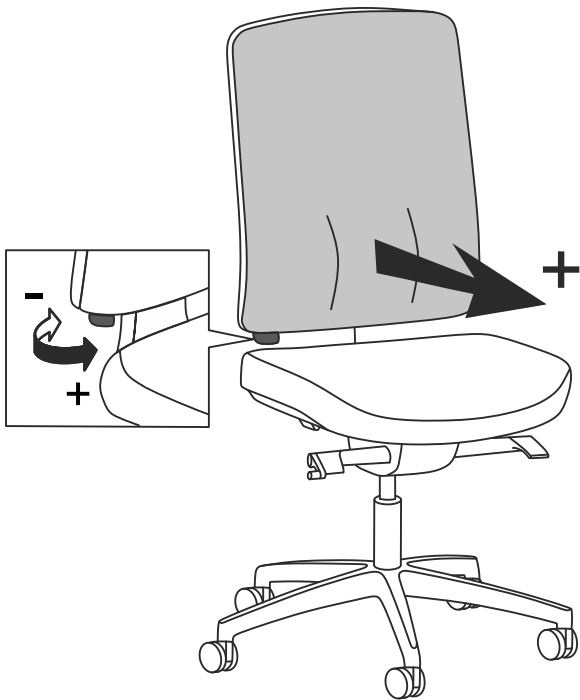 


FX 1113A  
FX 1114

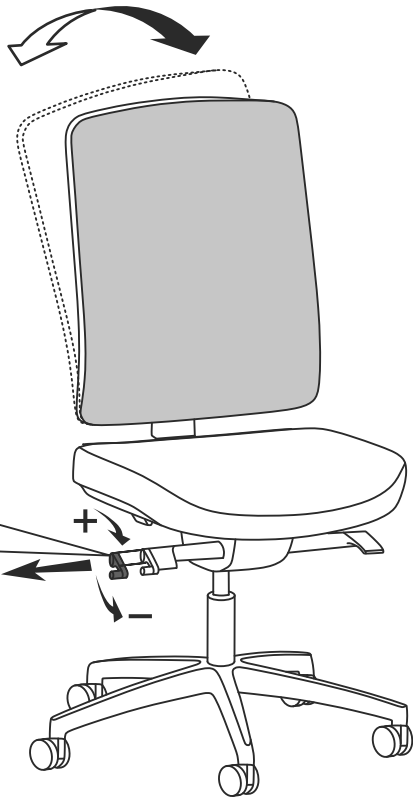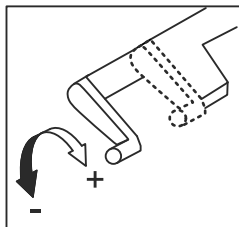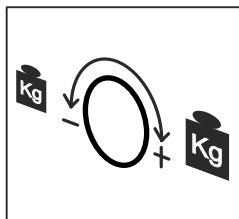   


**STOP!  
STOP!**

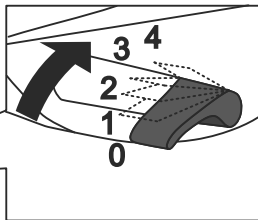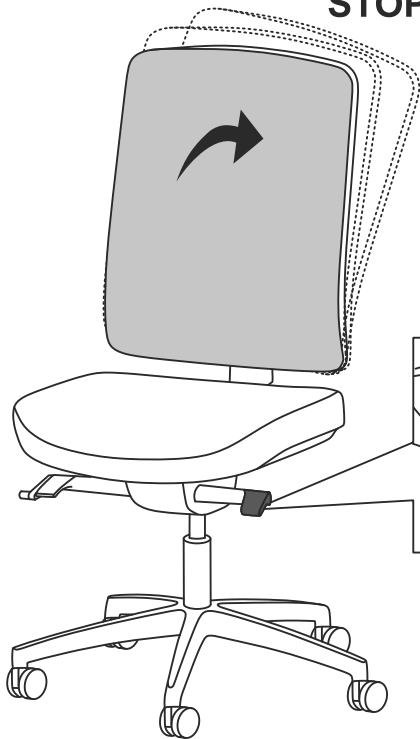  


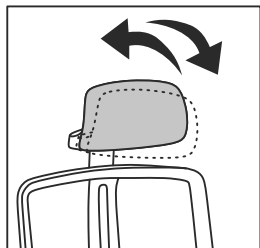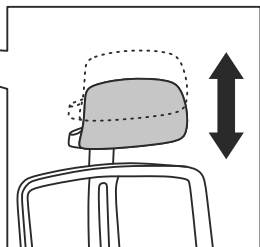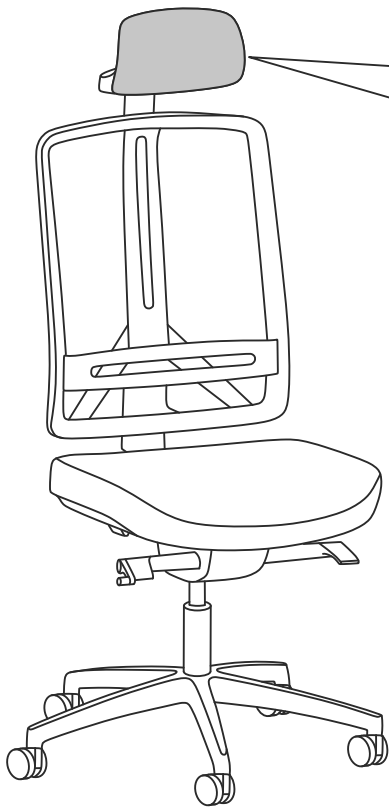   





082 1F

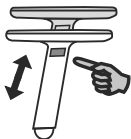 

083A 3F

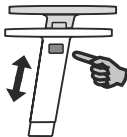 

084 4F

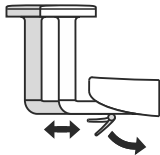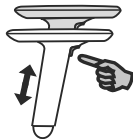    

# Rim

**RIM CZ a.s.**

Dr. E. Beneše 1015

765 02 Otrokovice

CZECH REPUBLIC

Tel.: +420 577 112 640

E-mail: [info@rim.cz](mailto:info@rim.cz)

[www.rim.cz](http://www.rim.cz)

