


# Rim<sup>®</sup>


NÁVOD K POUŽITÍ  
BEDIENUNGSANLEITUNG  
OPERATING INSTRUCTIONS  
MODE D'EMPLOI  
INSTRUKCJA UŻYTKOWANIA  
HASZNÁLATI ÚTMUTATÓ

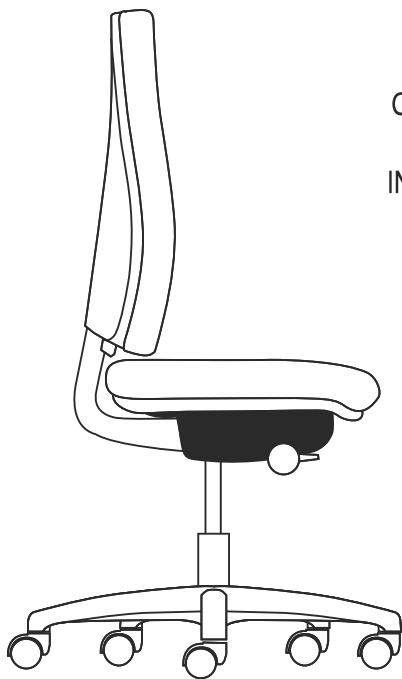


**FLASH FL 744 NPR**  
**FLASH FL 745**

SYNCHRO STE


1

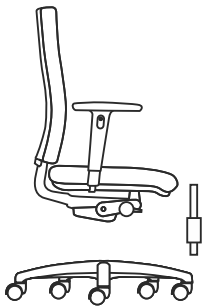


2

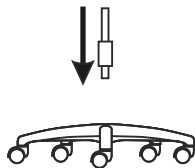



3

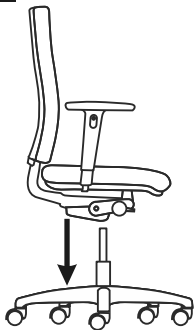


4

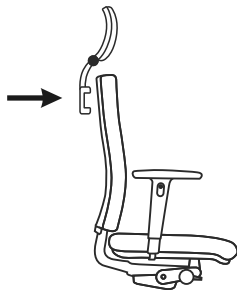

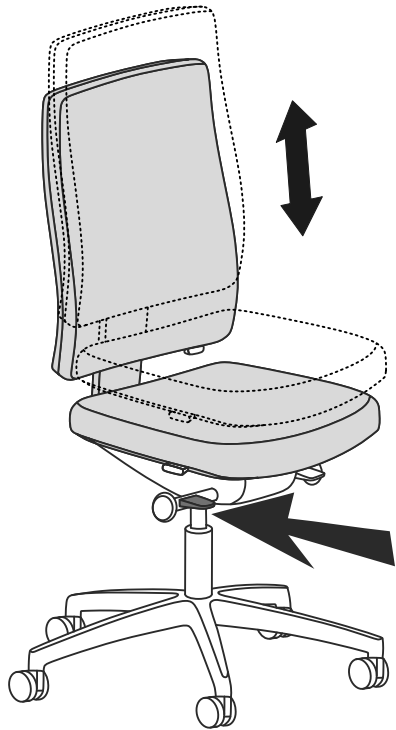


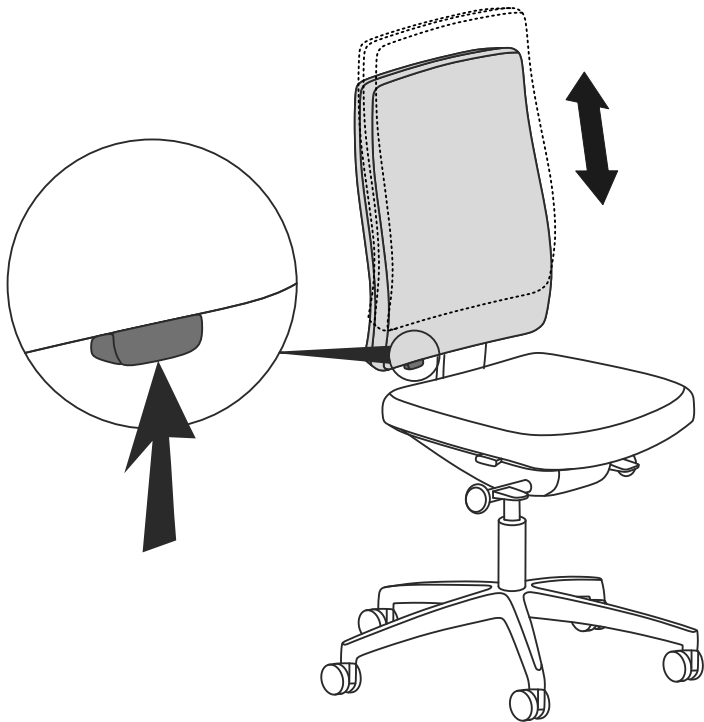


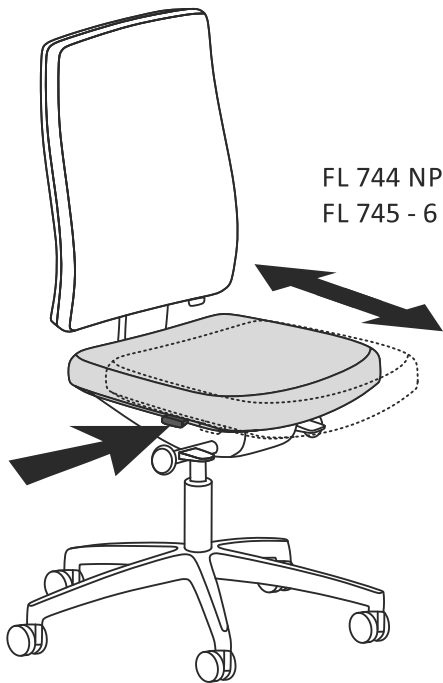



FL 744 NPR - 10 cm

FL 745 - 6 cm

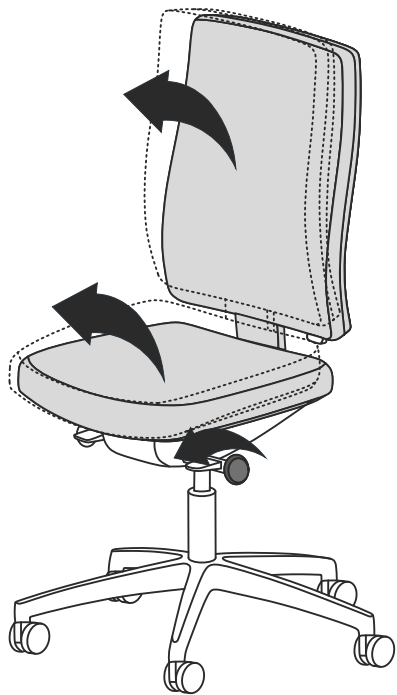




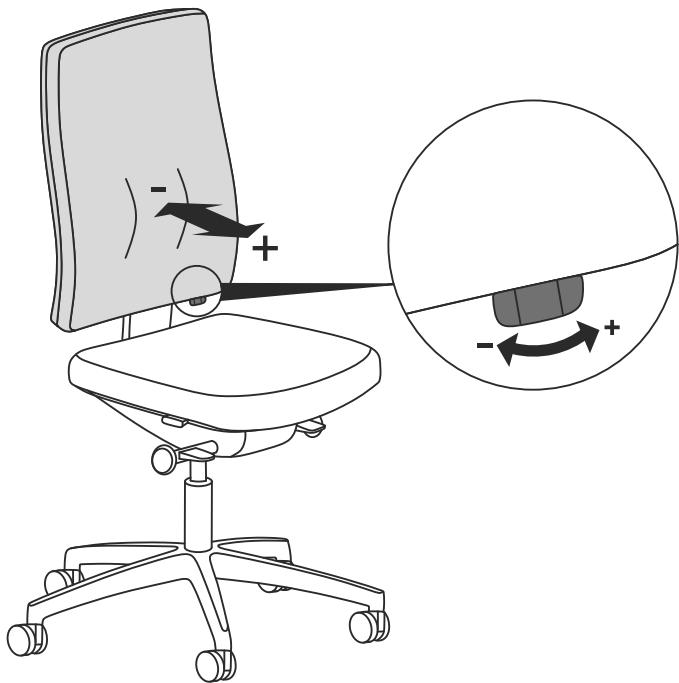


**STOP IN 4 POSITION**



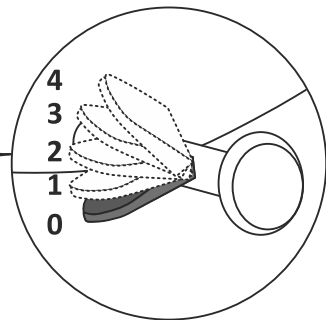
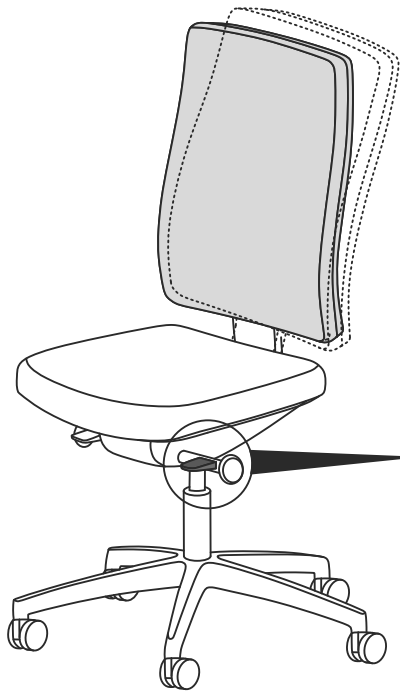






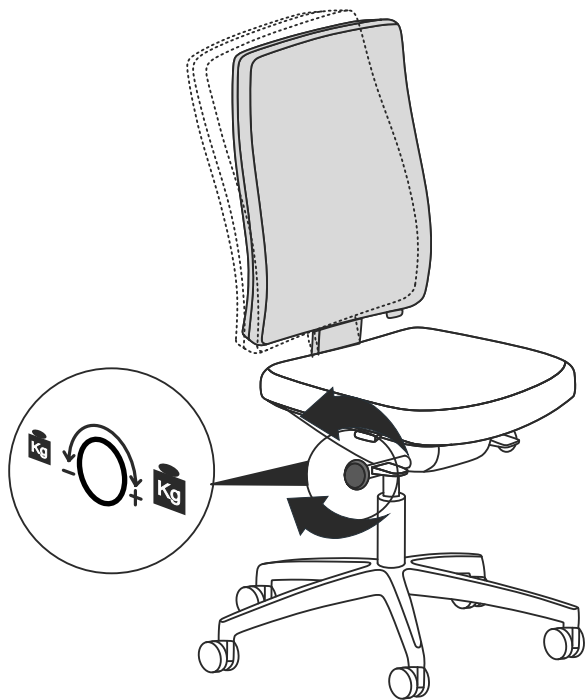


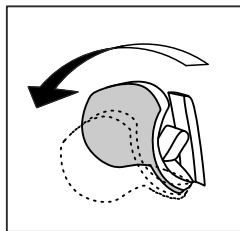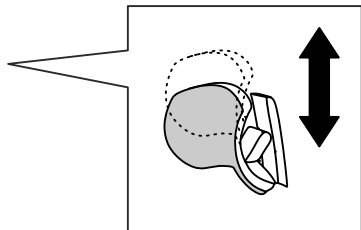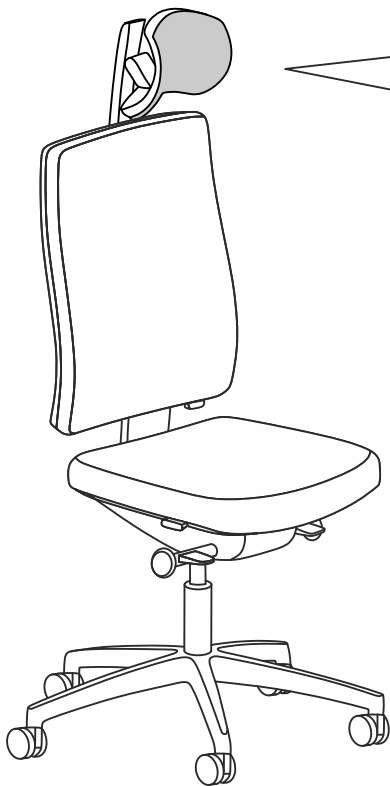




089 NPR 4F

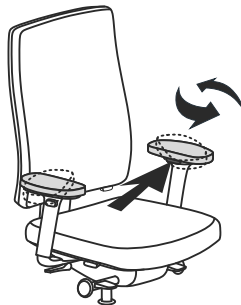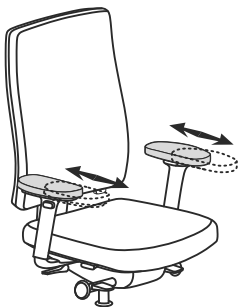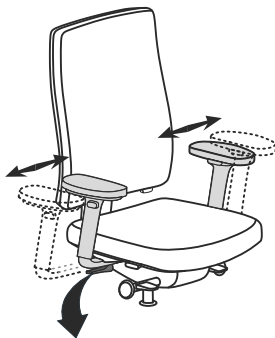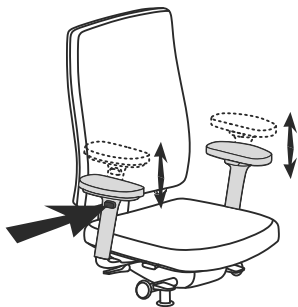

086 3F

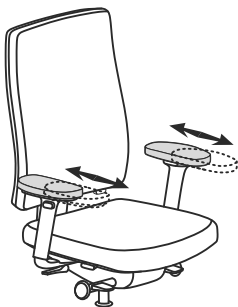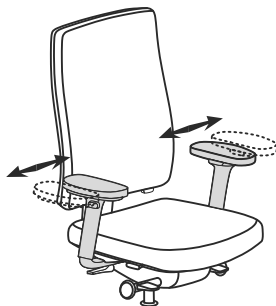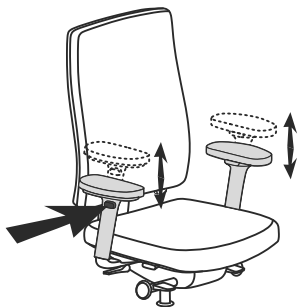

088 4F

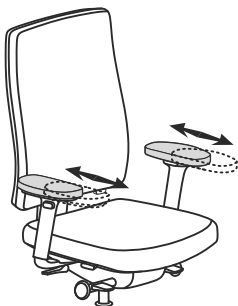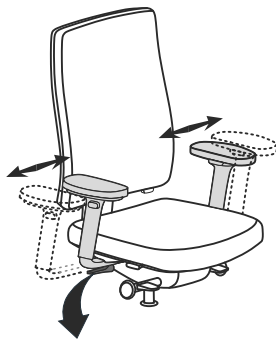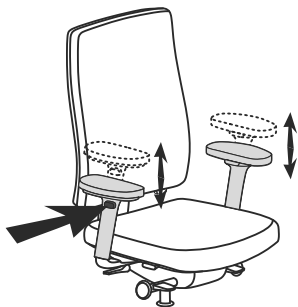

# Rim<sup>®</sup>

**RIM CZ s.r.o.**

Dr. E. Beneše 1015

765 02 Otrokovice

CZECH REPUBLIC

Tel.: +420 577 112 641, -640

Fax: +420 577 101 015

E-mail: [info@rim.cz](mailto:info@rim.cz)

[www.rim.cz](http://www.rim.cz)

