 


# Rim<sup>®</sup>

 
NÁVOD K POUŽITÍ  
BEDIENUNGSANLEITUNG  
OPERATING INSTRUCTIONS  
MODE D'EMPLOI  
INSTRUKCJA UŻYTKOWANIA  
HASZNÁLATI ÚTMUTATÓ

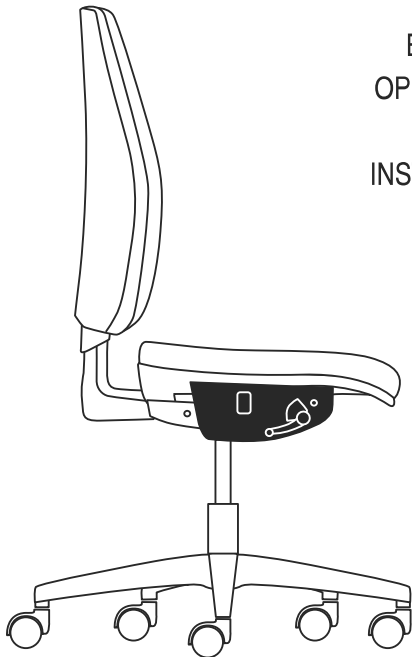


## **SYNCHRO ST1**

FLEXi FX 1104  
FLEXi FX 1114  
ANATOM AT 985A  
ACTIVE AC 954A  
ADAPT AD 971A


1

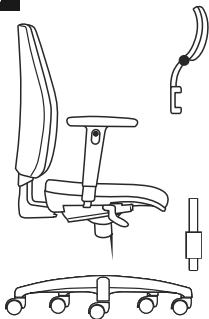


2

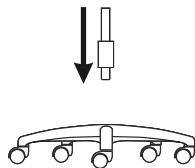 




3

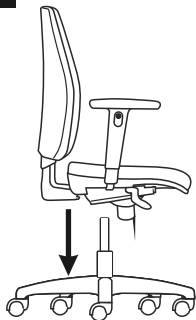 



4

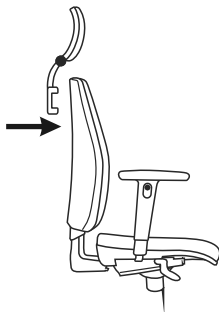 


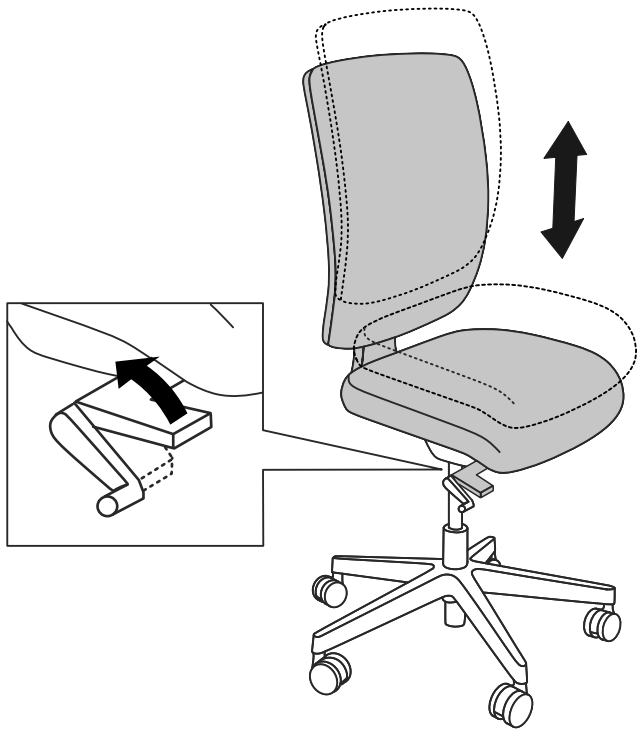 

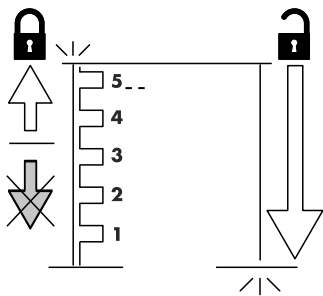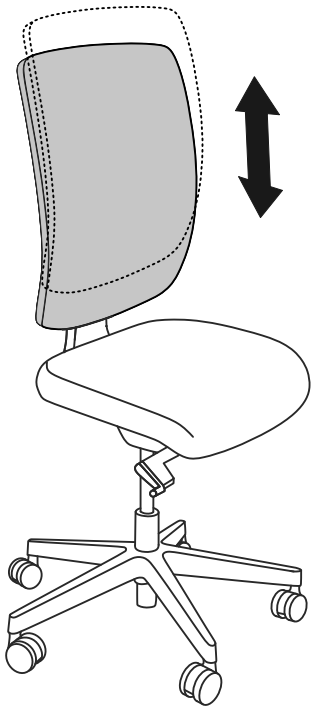  


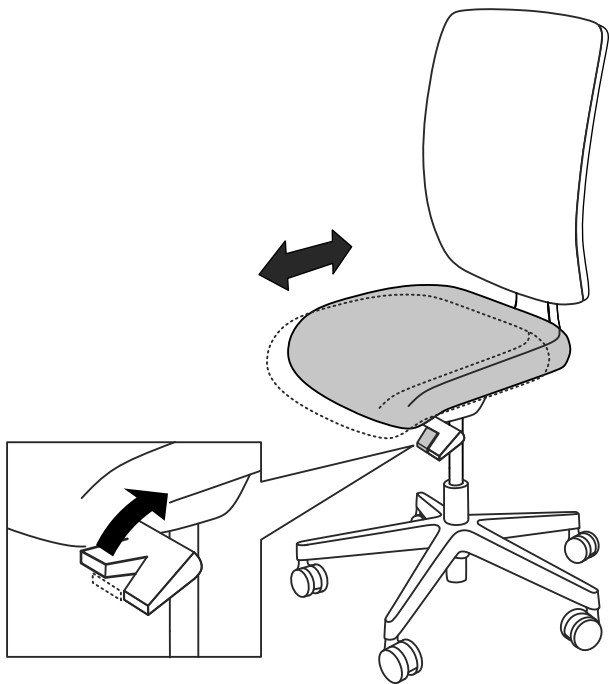 

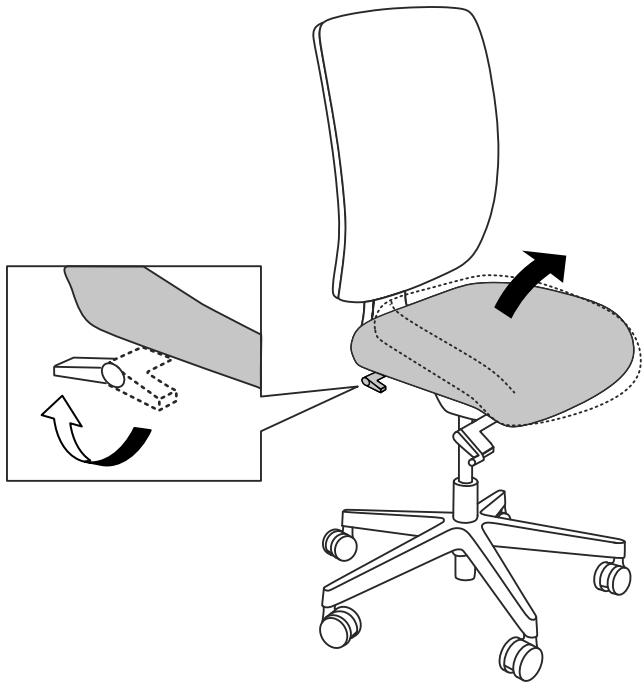  

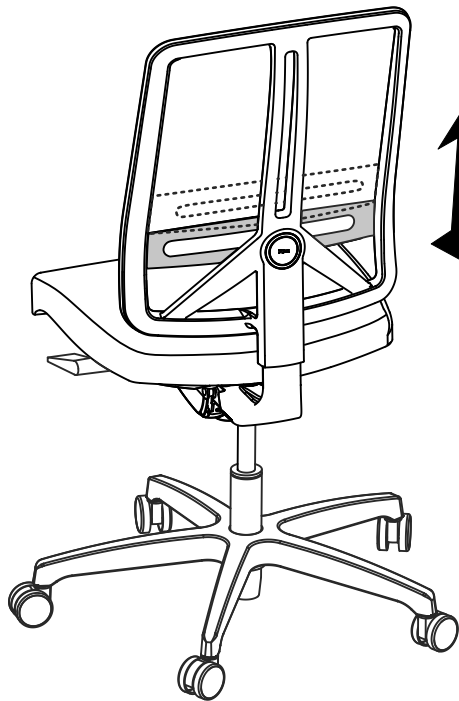


FLEXi FX 1104  
ADAPT AD 971A



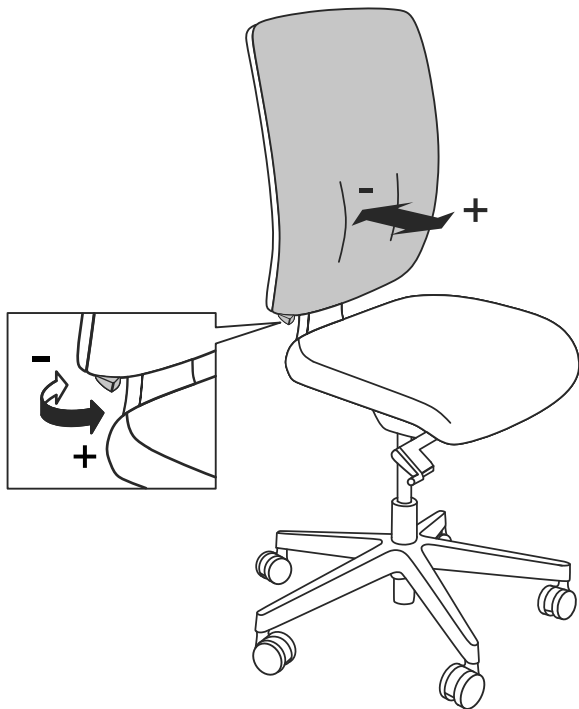 


FLEXi FX 1114







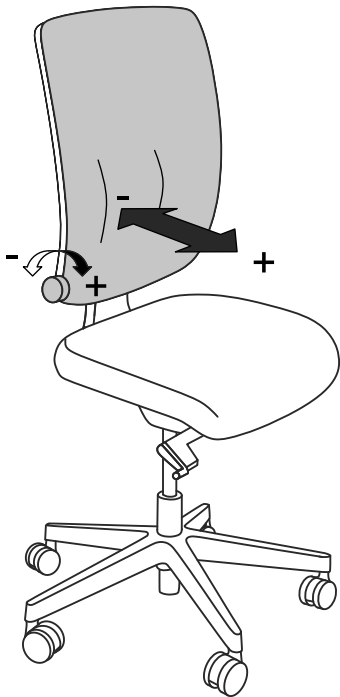 


ANATOM AT 985A  
ACTIVE AC 954A

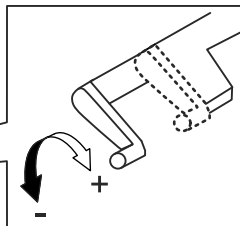 
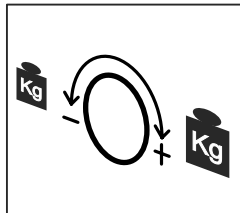 
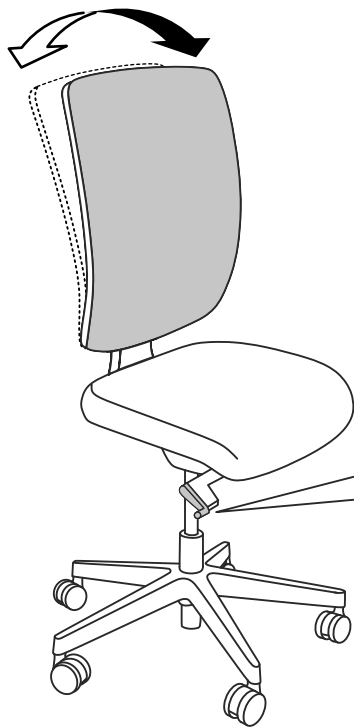 


**STOP!**  
**STOP!**

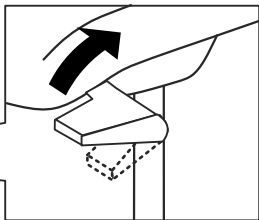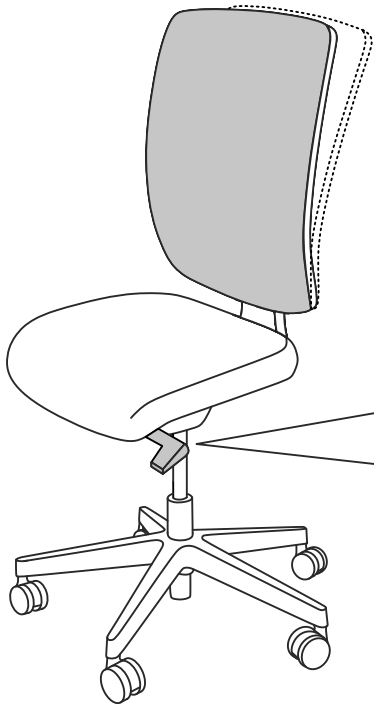  

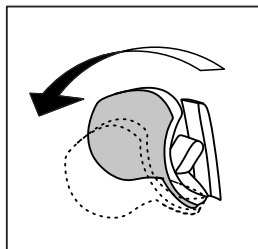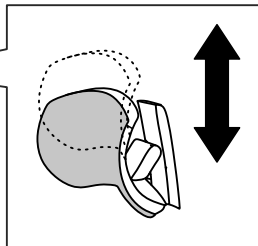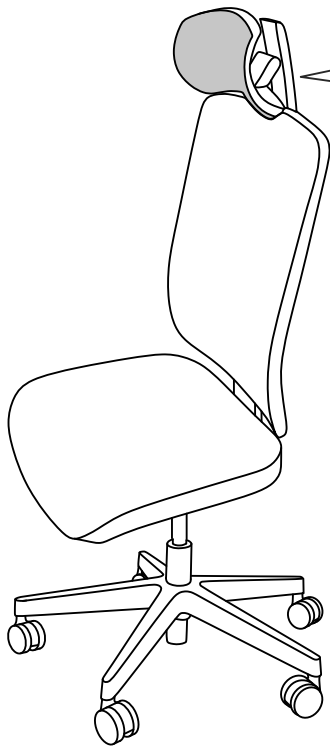   

   
FLEXi FX 1104  
FLEXi FX 1114  
ADAPT AD 971A

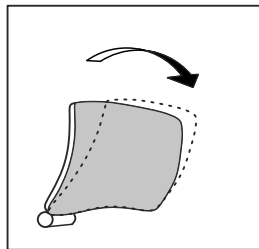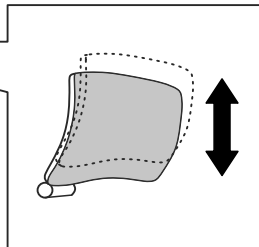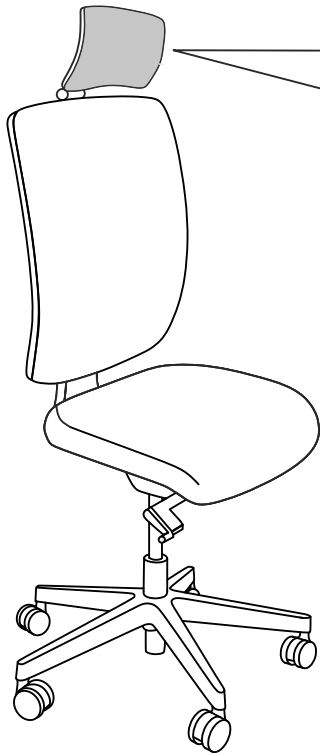




ANATOM AT 985A  
ACTIVE AC 954A

ANATOM AT 985A  
ADAPT AD 971A

 82 1F

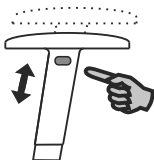


83 3F

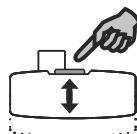  
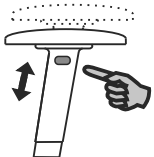 


FLEXi FX 1104  
FLEXi FX 1114  
ACTIVE AC 954A



 
91 1F

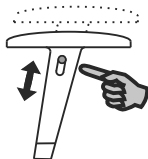




99 2F

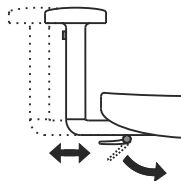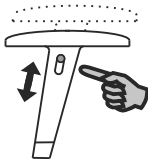  

86 3F

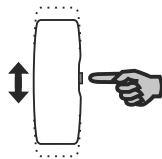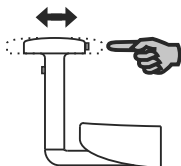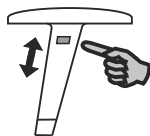   

88 4F

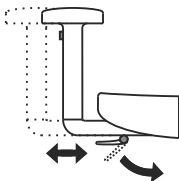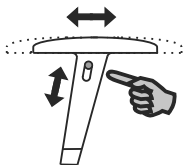   

# Rim<sup>®</sup>

**RIM-CZ spol. s r.o.**

Dr. E. Beneše 1015

765 02 Otrokovice

CZECH REPUBLIC

Tel.: +420 577 112 641, -640

Fax: +420 577 101 015

E-mail: [info@rim.cz](mailto:info@rim.cz)

[www.rim.cz](http://www.rim.cz)

